



List of Warning/Indicator Lights



The units used on the speedometer, the tachometer gauge display, indicators and warning lights may differ depending on the model / type.


Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.


- 

(U.S.A.)
- 

(Canada)
- Brake system warning light


Stop the vehicle immediately.


- 


Charging system warning light
- 


Low engine oil pressure warning light


Have the vehicle inspected immediately.


- 


(U.S.A.)
- 


(Canada)
- Malfunction indicator lamp
- 


Rear light failure warning light
- 

Automatic transmission fluid temperature warning light<sup>\*1</sup>
- 

Automatic headlight leveling system warning light<sup>\*2</sup>
- 

SRS warning light
- 

(U.S.A.)
- 

(Canada)
- ABS warning light
- 

(Flashing and then continuously on)
- Tire pressure warning light

For further information, refer to the Owner's Manual.

## Follow the correction procedures.



Open door warning light



Low fuel level warning light



Driver's seat belt reminder light



Front passenger's seat belt reminder light<sup>\*3</sup>



Tire pressure warning light



Low washer fluid warning light



Engine oil replacement reminder light (U.S.A.)



Dynamic laser cruise control master warning light<sup>\*4</sup>

## See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Cruise control indicator



Conventional cruise control indicator<sup>\*4</sup>



Ready mode indicator<sup>\*4</sup>



Shift position indicators<sup>\*5</sup>



Shift position and shift range indicators<sup>\*6</sup>



Slip indicator



AFS OFF indicator<sup>\*2</sup>



ECT SNOW indicator



AIR BAG ON indicator<sup>\*3</sup>



AIR BAG OFF indicator<sup>\*3</sup>



VSC OFF indicator



Electronically modulated air suspension indicator<sup>\*7</sup>

<sup>\*1</sup>: 4WD models

<sup>\*2</sup>: Vehicles with discharge headlights

<sup>\*3</sup>: On the center panel

<sup>\*4</sup>: Vehicles with dynamic laser cruise control

<sup>\*5</sup>: Vehicles with a standard automatic transmission

<sup>\*6</sup>: Vehicles with a multi-mode automatic transmission

<sup>\*7</sup>: If equipped

For further information, refer to the Owner's Manual.

## Spare Tire and Tool Compartment

### n Jack, tools, and spare tire



CLYOGAA107

- 1 Tool bag
- 2 Jack handle
- 3 Jack
- 4 Adapter socket (for removing the spare tire)
- 5 Towing eyelet
- 6 Wrench
- 7 Spare tire

### n Taking out the spare tire



CLYOGAA108

- 1 Remove the inside spare tire cover.



CLYOGAA330

- 2 Open the right side auxiliary box and remove the cover of the spare tire clamp bolt.




- 3 Put the adapter socket on the spare tire clamp bolt. Connect the jack handle and adapter socket, and then turn the jack handle counter-clockwise.



- 4 Pull out the spare tire and remove the holding bracket.

### If the engine switch does not turn easily...

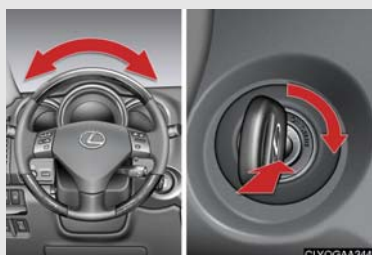

Turn the engine switch while lightly moving the steering wheel from left to right.